

RADIAN® COMPRESSOR™

▷ QUICK-TUNE™ GUIDE ROD

INSTALLATION INSTRUCTIONS


STEP 01 | Compress installed spring and insert tool* into the cross hole to hold the spring down.

STEP 02 | Remove the dovetailed end cap. Then remove the tool from the cross hole, allowing the spring to be removed.

STEP 03 | Install a different spring weight, compress new spring, and insert the tool back into the cross hole again.

STEP 04 | Align dovetail to install cap, remove the tool, and allow spring to capture around the dovetail interface.

**While a tool is not necessary for the Radian guide rod, it can assist in holding the spring down when removing and installing the cap.*

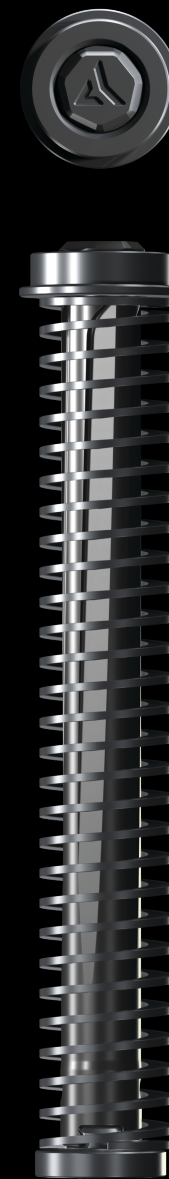

@RADIANWEAPONS

CONTACT US

E SUPPORT@RADIANWEAPONS.COM
O 503.893.2987

875 NE KINGWOOD AVE
REDMOND, OR | 97756